




"دستورالعمل دستگاه CD ربات"

۱- دستگاه را خاموش و روشن نکنید، زیرا با هر بار خاموش و روشن کردن مقداری از رنگ های کارتريج را مصرف میکند.

زمانی که این




۲- درب دستگاه به هنگام کار، به هیچ وجه باز نکنید به خصوص دو چراغ در حال چشمک زدن میباشند.

۳- با زدن گزینه Auto burn در نرم افزار، دستگاه به صورت اتوماتیک، تصاویر ارسالی را رایت CD انجام می دهد. در حالتی که به صورت دستی انجام دهید، این گزینه را خاموش کنید.

۴- برای رایت کردن تصویر چند بیمار در یک DVD، حالت Auto burn را خاموش کنید، سپس بیماران را از دستگاه به CD ربات ارسال کرده، سپس تیک همه بیماران را انتخاب نموده و در نهایت گزینه burn را بزنید.

۵- اطلاعات صفحه پنل دستگاه CD ربات به شرح زیر است:

Control Panel

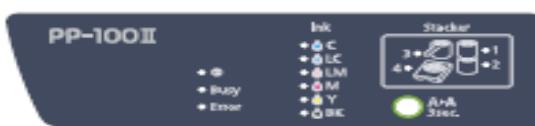

Buttons

Button	Function
Cleaning 3SEC.	Press and hold for 3 seconds to clean the print head.

Lights

Light	Description
Power	On when the product is on. Flashes when the product is initializing, after replacing an ink cartridge, charging Ink, or cleaning the print head.
BUSY	Flashes when jobs are processed.
ERROR	On when cover is open, or when errors on disc transfer, stacker, drive, or printer occur. Flashes when a problem occurs with the product.
INK	On when an ink cartridge has reached its replacement time or is not correctly inserted. Flashes when Ink is low. All INK lights flash rapidly when the maintenance box has reached its replacement time or is not correctly inserted.
STACKER	On when the stacker is overloaded with discs, or when stacker 3 is not removed while stacker 3 is set to Do not use In Standard mode, External Output mode, and Read Back mode. Flashes when the stacker is not installed correctly or the stacker is out of discs. When the stacker 4 light flashes rapidly, do not pull out stacker 4.

