

# GO REGULATOR

## Back Pressure Regulators

### Index

BP-3 Series	1
BP-6 Series	4
BP-8 Series	7
BP-8LF Series	10
CBP-3 Series	13
LB-1 Series	16
SBPR Series	19
BP-60 Series	22
BP-66 Series	25



pressure regulators

### GO Regulator

405 Centura Court • PO Box 4866 (29305) • Spartanburg, SC 29303  
Phone (864) 574-7966 Fax (864) 574-5608  
www.goreg.com • sales@goreg.com

# GO REGULATOR

## BP-3 Series

Adjustable Back Pressure Regulators

### Introduction

The BP-3 Series is designed for either liquid or gas service in instrumentation systems. Similar in design to pressure reducing control regulators which regulate outlet pressures, back pressure regulators control the inlet pressure. The many features of this regulator, particularly its precise throttling action, make it ideal for this type of application. In low flow or closed systems, over-pressures often are released by pressure relief valves. This type of relief is on-off with no throttling control. In contrast to relief valves, the back pressure control regulator with its throttling action substantially improves system pressure regulation.



pressure regulators

### Typical Applications

- Analytical instrumentation
- Gas and liquid sampling
- Petrochemical industry
- Air compressors
- Research labs
- Pilot plants

### Technical Data

CONSTRUCTION	316L stainless steel
ADJUSTABLE PRESSURE CONTROL RANGES	0-6, 0-10, 0-25, 0-50, 0-100, 0-250, 0-500, 0-750 & 0-1000 psig
OPERATING TEMPERATURE	-40° F to +500° F (-40° C to +260° C)
C <sub>v</sub> COEFFICIENT	0.2
OPTIONAL VARIOUS ORIFICE SIZES	0.005, 0.01, 0.025, 0.03, 0.04, 0.05, 0.06, 0.095, 0.12, 0.24, and 0.3

### Features & Benefits

- Only 316L stainless steel and PTFE in flow stream
- Bubble tight shutoff
- Gas or liquid service

### Options

- Wetted materials of construction brass, Monel®, Hastelloy® C-276, titanium
- Extra ports
- Panel mount (requires a 1<sup>3</sup>/<sub>8</sub>" mounting hole)
- High purity connections
- Pressure gauges

### GO Regulator

405 Centura Court • PO Box 4866 (29305) • Spartanburg, SC 29303  
Phone (864) 574-7966 Fax (864) 574-5608  
www.goreg.com • sales@goreg.com

# Adjustable Back Pressure Regulators


## Maximum Temperature and Control Pressures

SEAT MATERIAL	MAXIMUM TEMPERATURE	@	MAXIMUM CONTROL RANGE
Viton®	250° F (121° C)	@	250 psig (1.71 MPa)
Kalrez®	300° F (148° C)	@	250 psig (1.72 MPa)
High Density PTFE	200° F (93° C)	@	500 psig (5.16 MPa)
Polyimide	500° F (260° C)	@	1000 psig (6.88 MPa)
PEEK™	500° F (260° C)	@	1000 psig (6.88 MPa)

Note: Temperatures in excess of 175° F (79° C) require the use of a metal knob or the tamper proof option.

## How to Order

For additional configurations, consult the factory. **Standard items in bold.**

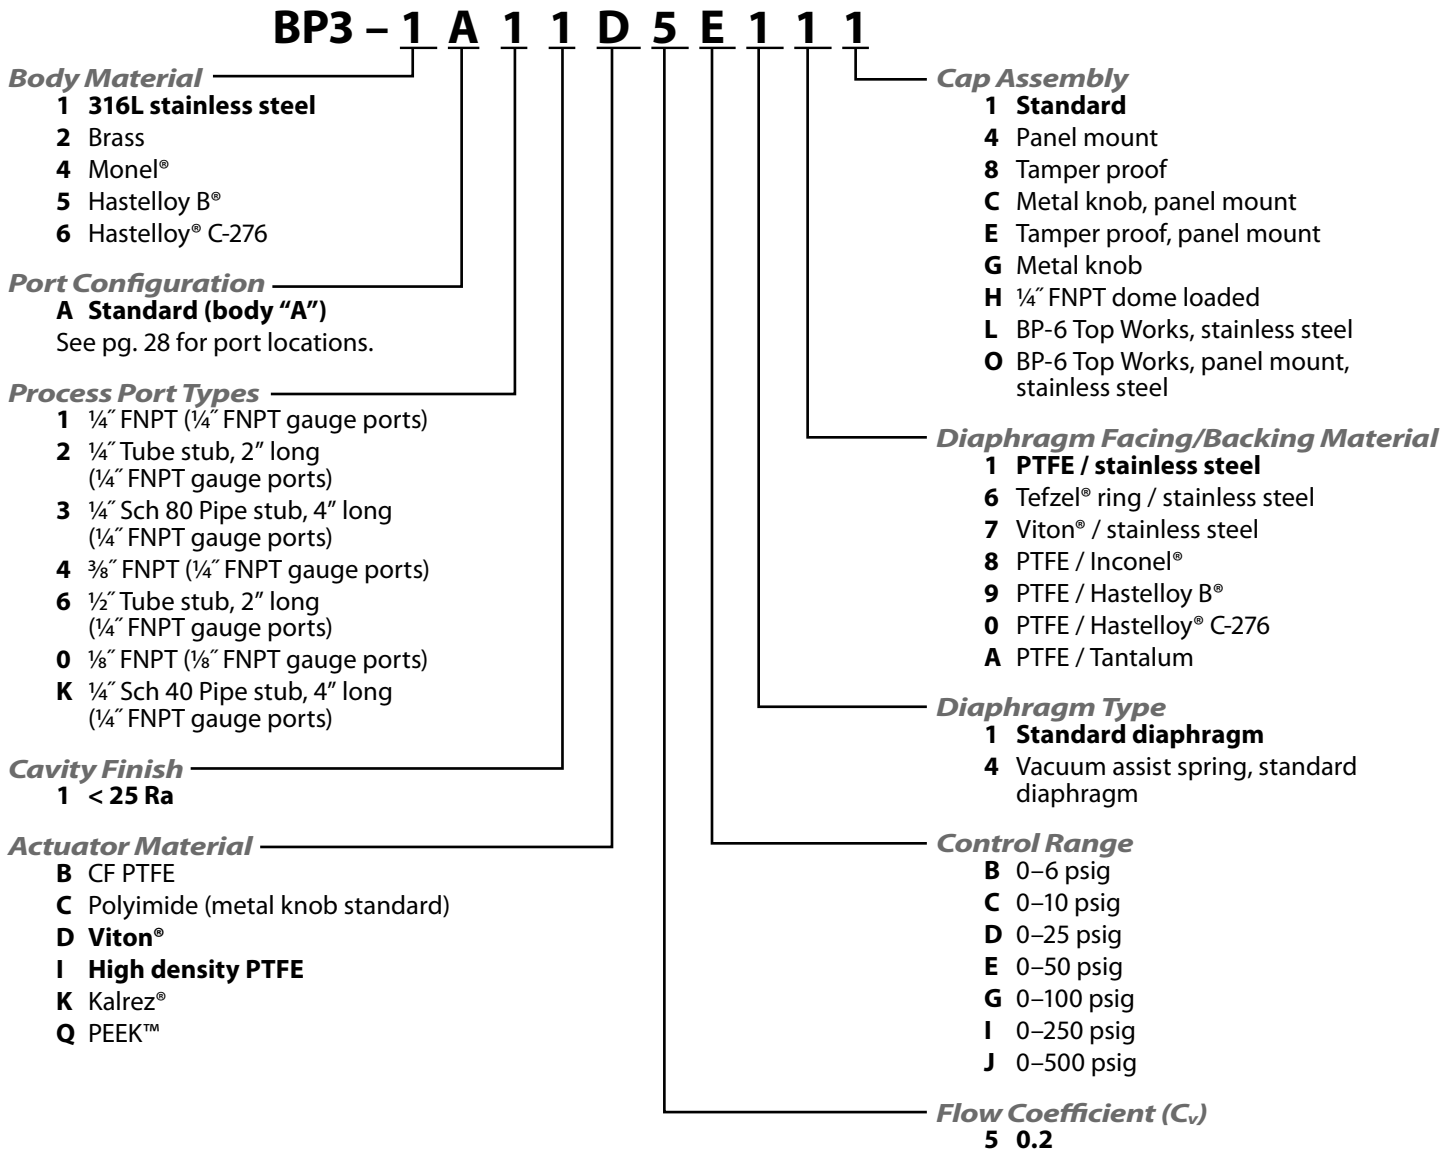


NOTE: The choices above represent an abbreviated list of the more commonly ordered options. For a complete listing of all available options, please see the Selection Wizard on the GO website at [www.goreg.com](http://www.goreg.com) or contact the factory.

For flow curve charts, visit <http://www.goreg.com>.

# Adjustable Back Pressure Regulators

## *Outline and Mounting Dimensions*

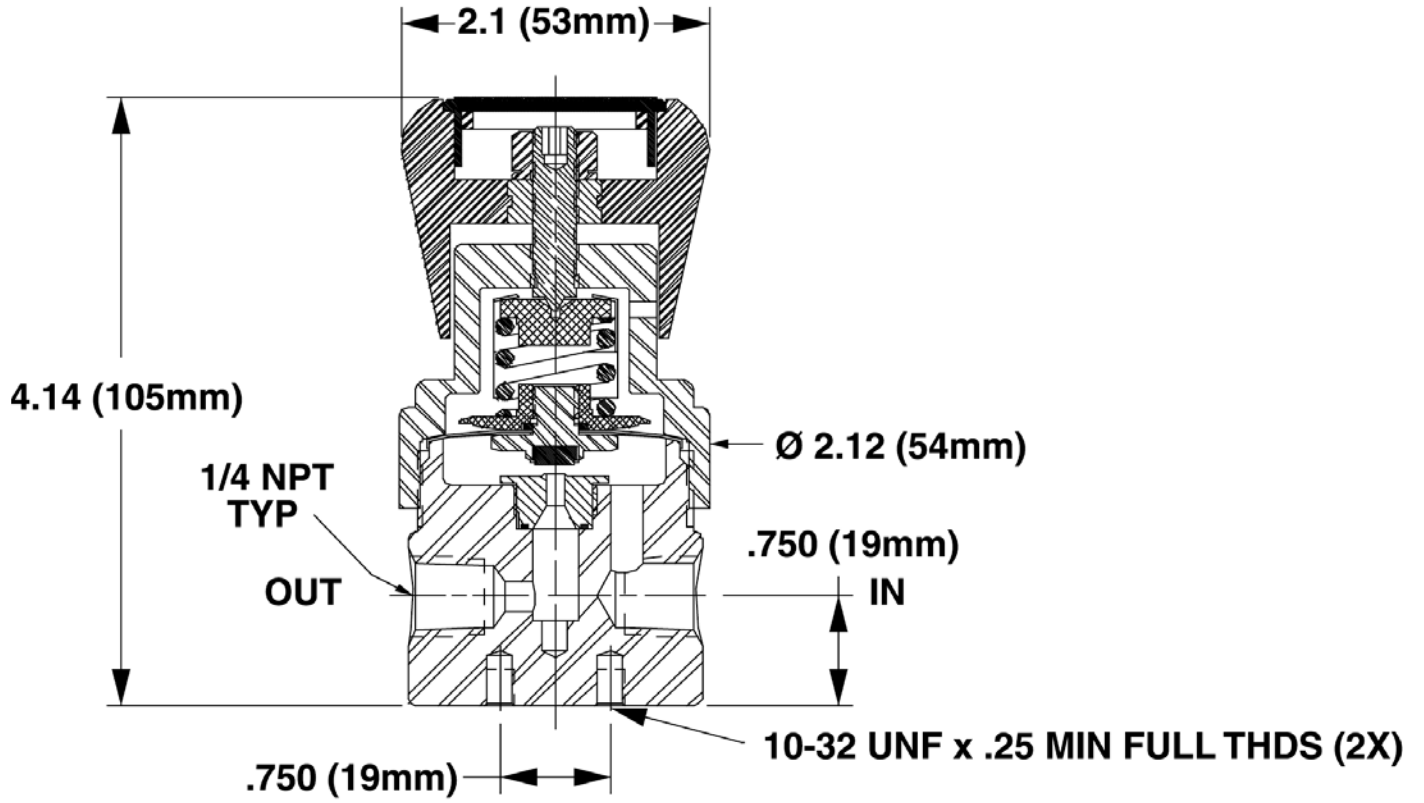

**Weight - 1.9 lbs (0.86 kg)**

# GO REGULATOR

## BP-6 Series

High Flow Back Pressure Regulator

### Introduction

The BP-6 Series was originally designed as a back pressure regulator for reverse osmosis water purification systems. It may also be easily used in pilot facilities and large instrumentation systems. The standard 316 stainless steel seat assembly, which was intended for long term usage in sea water, can also be useful in various chemical environments. While the stainless steel seat assembly does not offer tight shutoff, it is not normally required in high flow systems. If a more positive shutoff is required a PTFE/stainless steel seat assembly is available.

The BP-6 Series is normally provided in 316 stainless steel construction but other materials are available.



pressure regulators

### Typical Applications

- Pilot plants
- Large instrumentation systems
- Reverse osmosis water purification systems

### Technical Data

CONSTRUCTION	316L stainless steel (standard), Monel®, Hastelloy® C-276, or titanium (optional)
ADJUSTABLE STANDARD PRESSURE RANGES	0–100, 0–250, 0–500 and 0–1000 psig
OPERATING TEMPERATURE	–40° F to +500° F (–40° C to +260° C)
Cv COEFFICIENT	3.0
INLET & OUTLET CONNECTIONS	½" FNPT

### Features & Benefits

- Gas or liquid service
- Sensing with PTFE lined stainless diaphragm
- Metal to metal seat

### Options

- Soft seat for bubble tight shutoff
- Panel mounting
- Extra ports
- Special welded connections
- Pressure gauges

### GO Regulator

405 Centura Court • PO Box 4866 (29305) • Spartanburg, SC 29303  
Phone (864) 574-7966 Fax (864) 574-5608  
www.goreg.com • sales@goreg.com


# High Flow Back Pressure Regulators

## Maximum Temperature and Control Pressures

SEAT MATERIAL	MAXIMUM TEMPERATURE	@	MAXIMUM CONTROL RANGE
PTFE	200° F (93° C)	@	1000 psig (6.88 MPa)
316L stainless steel	500° F (260° C)	@	1000 psig (6.88 MPa)
Monel®	500° F (260° C)	@	1000 psig (6.88 MPa)
Hastelloy® C-276	500° F (260° C)	@	1000 psig (6.88 MPa)
Titanium	500° F (260° C)	@	1000 psig (6.88 MPa)

## How to Order


For additional configurations, consult the factory. **Standard items in bold.**

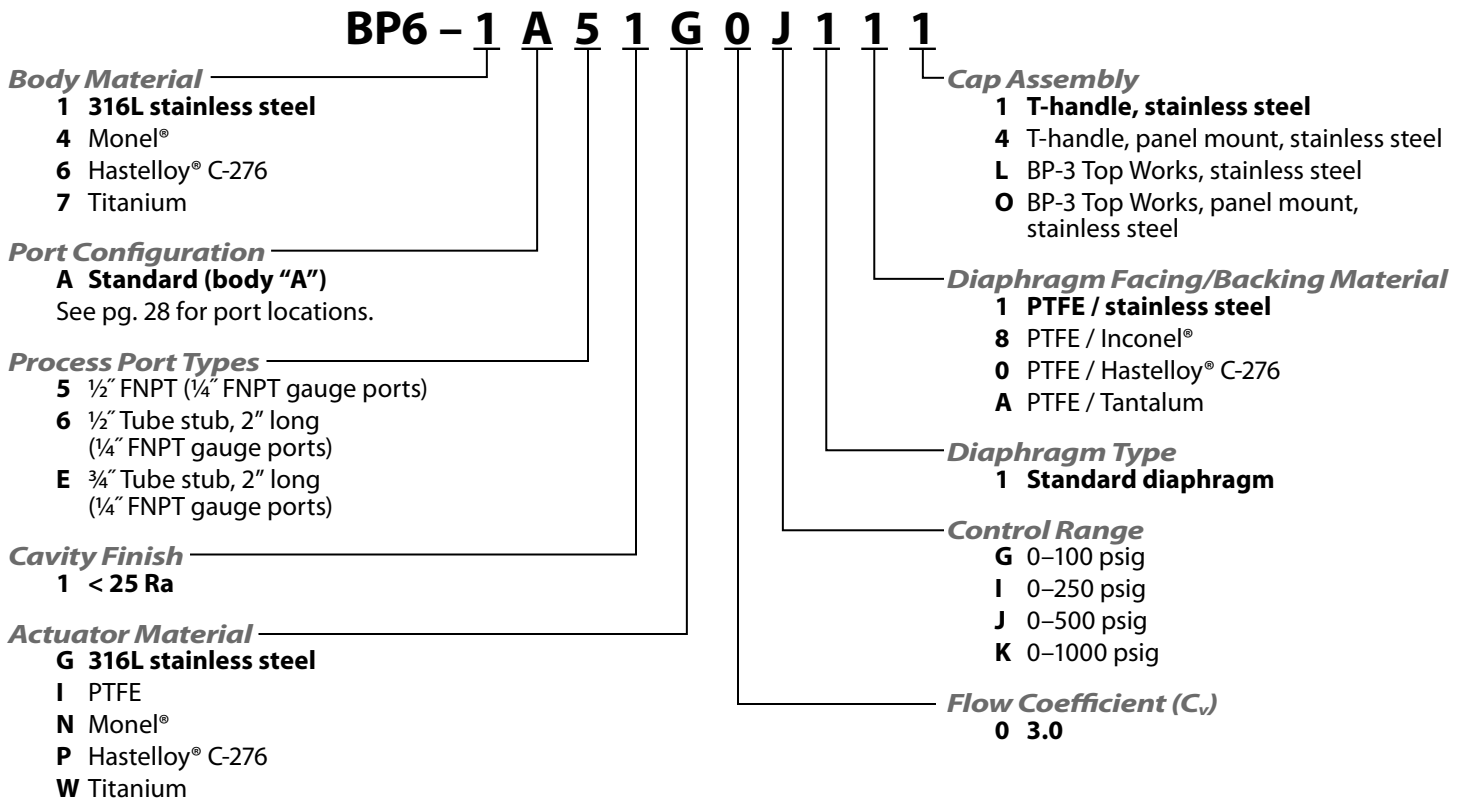

NOTE: The choices above represent an abbreviated list of the more commonly ordered options. For a complete listing of all available options, please see the Selection Wizard on the GO website at [www.goreg.com](http://www.goreg.com) or contact the factory.

# High Flow Back Pressure Regulators

## *Outline and Mounting Dimensions*

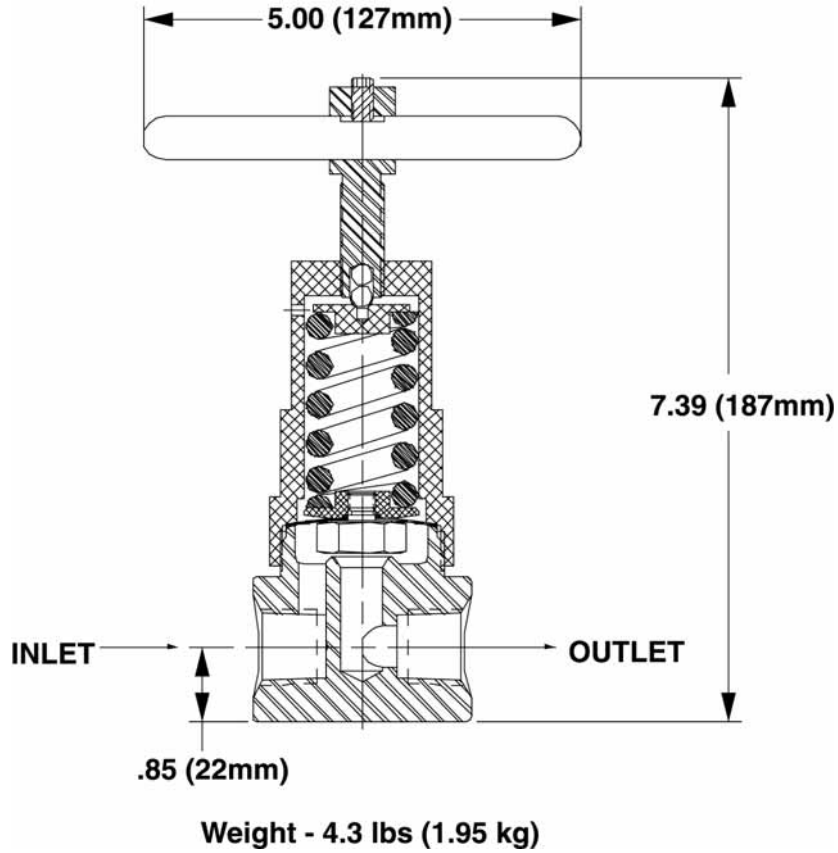

# GO REGULATOR

## BP-8 Series

High Flow Back Pressure Regulators

### Introduction

This series is designed to control back pressure at low to moderate pressure ranges with relatively high flow. While designed primarily for instrumentation systems and similar to the PR-7, the BP-8 is also suitable for pilot plant, research and development activities. Special diaphragm and spring combinations give the user a selection of pressure ranges that are near atmospheric. The glass filled PTFE / stainless seat assembly gives tight shut off even at lower flows for most applications.

The 316 stainless steel body assembly provides service for most chemical environments and brass models are available for those applications not requiring that type of corrosion resistance. If special requirements demand other materials of construction, please contact the factory.



pressure regulators

### Typical Applications

- Instrumentation systems
- Pilot plants
- Air compressors

### Technical Data

CONSTRUCTION	316L stainless steel or brass (standard) Monel® or Hastelloy® C-276 (optional)
ADJUSTABLE STANDARD PRESSURE RANGES	0-10, 0-25, 0-50, 0-100, 0-250, and 0-500 psig
OPERATING TEMPERATURE	-40° F to +250° F (-40° C to +121° C)
C <sub>v</sub> COEFFICIENT	1.2 (standard) 0.40 and 0.70 (optional)
INLET & OUTLET CONNECTIONS	1/4" FNPT

### Features & Benefits

- Pressure control of large flows
- Standard stainless steel diaphragm, PTFE faced

### Options

- Panel mounting
- Extra ports
- 3/8" FNPT, 1/2" FNPT, 1/4" tube weld, 1/4" pipe weld,  
1/2" tube weld

### GO Regulator

405 Centura Court • PO Box 4866 (29305) • Spartanburg, SC 29303  
Phone (864) 574-7966 Fax (864) 574-5608  
www.goreg.com • sales@goreg.com



# High Flow Back Pressure Regulators

## Maximum Temperature and Control Pressures

SEAT MATERIAL	MAXIMUM TEMPERATURE	@	MAXIMUM CONTROL RANGE
Viton®	250° F (121° C)	@	250 psig (1.72 MPa)
Glass filled PTFE	250° F (121° C)	@	500 psig (3.44 MPa)

Temperatures in excess of 175° F (80° C) require the use of a T-handle or the tamper proof option.

## How to Order

For additional configurations, consult the factory. **Standard items in bold.**

**BP8 – 1 A 1 1 L 9 G 1 1 1**

**Body Material**

- 1** 316L stainless steel
- 2 Brass
- 4 Monel®
- 6 Hastelloy® C-276

**Port Configuration**

**A** **Standard (body "A")**  
See pg. 28 for port locations.

**Process Port Types**

- 1** ¼" FNPT (¼" FNPT gauge ports)
- 2 ¼" Tube stub, 2" long (¼" FNPT gauge ports)
- 3 ¼" Sch 80 pipe stub, 4" long (¼" FNPT gauge ports)
- 4 ⅜" FNPT (¼" FNPT gauge ports)
- 5 ½" FNPT (¼" FNPT gauge ports)
- 6 ½" Tube stub, 2" long (¼" FNPT gauge ports)
- K ¼" Sch 40 pipe stub, 4" long (¼" FNPT gauge ports)

**Cavity Finish**

- 1** < 25 Ra

**Actuator Material**

- D Viton®
- L** **Glass filled PTFE**

**Cap Assembly**

- 1** **Standard, stainless steel**
- 2 T-handle, stainless steel
- 3 T-handle, panel mount, stainless steel
- 4 Panel mount, stainless steel
- 5 Captured vent, aluminum
- 6 Captured vent, panel mount, aluminum
- 7 Captured vent, stainless steel
- 8 Tamper-proof, stainless steel
- G Metal knob
- H ¼" NPT dome-loaded, stainless steel

**Diaphragm Facing/Backing Material**

- 1** **PTFE / stainless steel**
- 2 PTFE / Viton®
- 6 Tefzel® ring / stainless steel
- 8 PTFE / Inconel®
- 0 PTFE / Hastelloy® C-276

**Diaphragm Type**

- 1** **Standard diaphragm**

**Control Range**

- C 0–10 psig
- D 0–25 psig
- E 0–50 psig
- G 0–100 psig
- I 0–250 psig
- J 0–500 psig

**Flow Coefficient (C<sub>v</sub>)**


- 9** **1.2**
- K 0.7
- L 0.4

NOTE: The choices above represent an abbreviated list of the more commonly ordered options. For a complete listing of all available options, please see the Selection Wizard on the GO website at [www.goreg.com](http://www.goreg.com) or contact the factory.

For flow curve charts, visit <http://www.goreg.com>.

# High Flow Back Pressure Regulators

## *Outline and Mounting Dimensions*

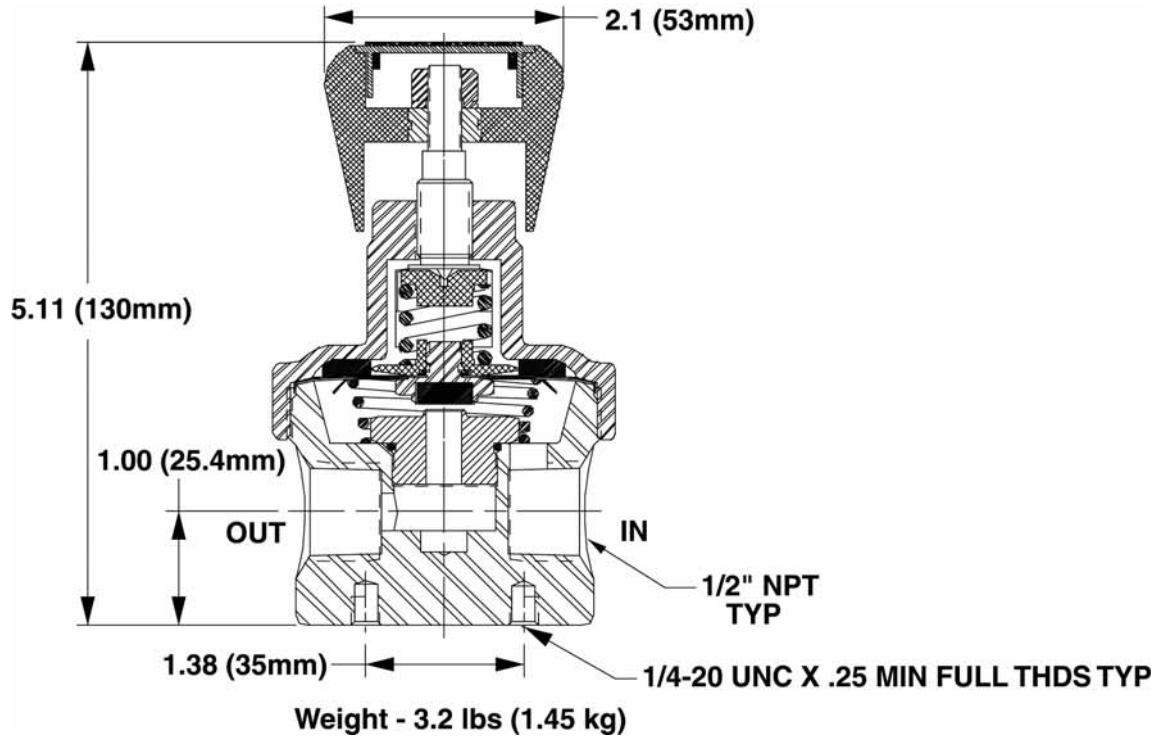

# GO REGULATOR

## BP-8LF Series

High Sensitivity Back Pressure Regulators

### Introduction

The BP-8LF Series back pressure regulator is designed to furnish precise low back pressure control in analytical instrumentation. With the combination of the large diaphragm sensing area of the BP-8 Series Regulator and the low flow seat assembly of the BP-3 Series pressure regulator, pressure control down to 10 inches of water is easily obtainable.



pressure regulators

### Typical Applications

- Analytical instrumentation
- Gas and liquid sampling
- Research labs

### Technical Data

<b>CONSTRUCTION</b>	316L stainless steel (standard) Monel® or Hastelloy® C-276 (optional)
<b>ADJUSTABLE STANDARD PRESSURE RANGES</b>	0–6, 0–25, 0–50, 0–75, 0–125, 0–250 & 0–500 psig
<b>OPERATING TEMPERATURE</b>	–40° F to +500° F (–40° C to +260° C)
<b>C<sub>v</sub> COEFFICIENT</b>	0.2 (standard) 0.03, 0.05, 0.06, 0.12, 0.24, 0.3, 0.095, 0.025, 0.04, 0.005, 0.01 (optional)
<b>INLET &amp; OUTLET CONNECTIONS</b>	¼" FNPT

### Features & Benefits

- Sensitive pressure control
- Low pressure adjustability
- Standard PTFE / Viton® diaphragm

### Options

- PTFE / stainless steel diaphragm

### GO Regulator

405 Centura Court • PO Box 4866 (29305) • Spartanburg, SC 29303  
Phone (864) 574-7966 Fax (864) 574-5608  
www.goreg.com • sales@goreg.com

# High Sensitivity Back Pressure Regulators


## Maximum Temperature and Control Pressures

SEAT MATERIAL	MAXIMUM TEMPERATURE	@	MAXIMUM CONTROL RANGE
Viton®	250° F (121° C)	@	500 psig (5.16 MPa)
Kalrez®	300° F (148° C)	@	500 psig (5.16 MPa)
High density PTFE	200° F (93° C)	@	500 psig (5.16 MPa)
Polyimide	500° F (260° C)	@	500 psig (5.16 MPa)

Temperatures in excess of 175° F (80° C) require the use of a T-handle or the tamper proof option.

## How to Order

For additional configurations, consult the factory. **Standard items in bold.**

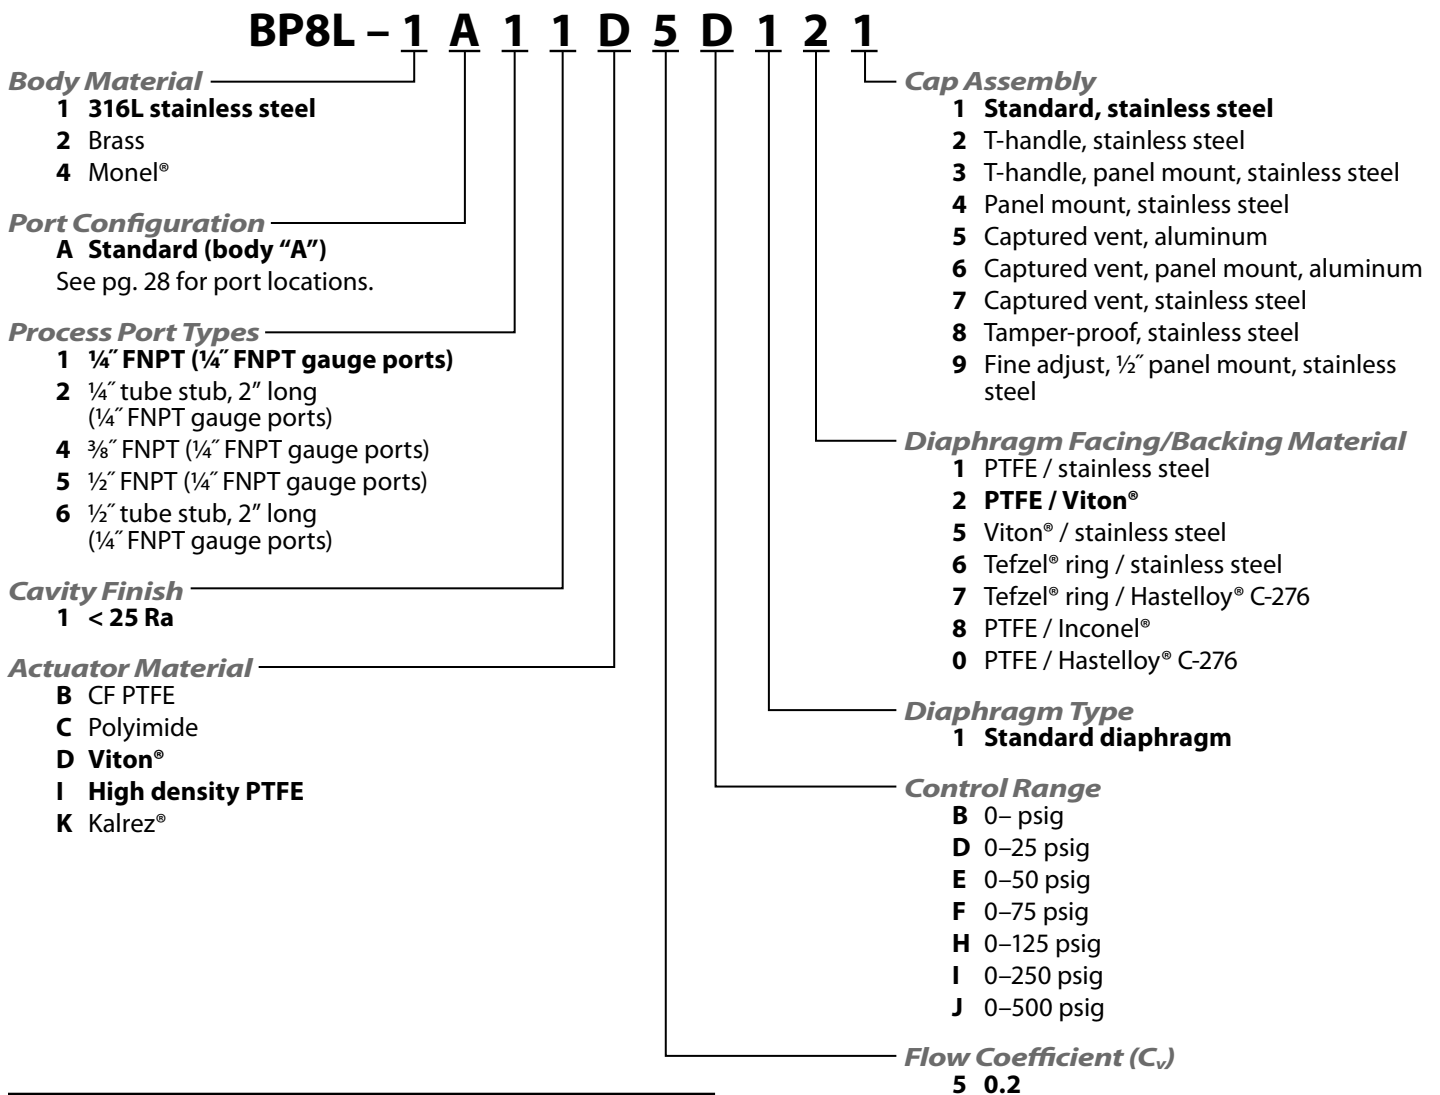


NOTE: The choices above represent an abbreviated list of the more commonly ordered options. For a complete listing of all available options, please see the Selection Wizard on the GO website at [www.goreg.com](http://www.goreg.com) or contact the factory.

For flow curve charts, visit <http://www.goreg.com>.

# High Sensitivity Back Pressure Regulators

## *Outline and Mounting Dimensions*

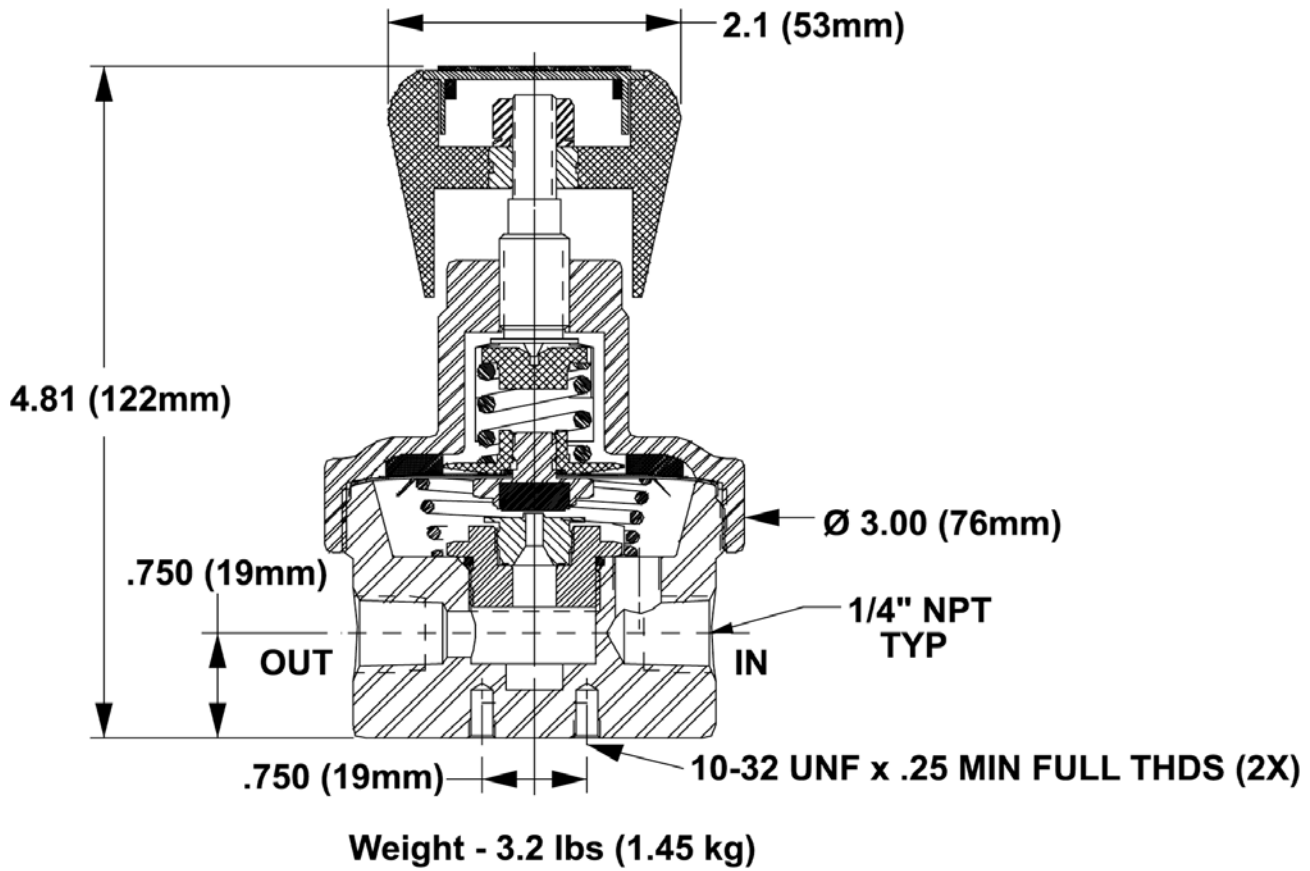

# GO REGULATOR

## CBP-3 Series

Compact Stainless Steel Back Pressure Regulators

### Introduction

The CBP-3 Series is a compact back pressure regulator with some of the time proven features of the BP-3 Series and new features evolving the compact size. This regulator is designed to allow the construction of compact sophisticated analytical instrumentation where the optimum in back pressure control is required. Standard features allow service in many varied applications including corrosive fluids and with the optional features available, the user can tailor this regulator to virtually any application requiring small to moderate flow rates.



pressure regulators

### Typical Applications

- Analytical instrumentation
- Gas and liquid sampling
- Petrochemical industry
- Air compressors
- Research labs
- Pilot plants

### Technical Data

<b>CONSTRUCTION</b>	316L stainless steel
<b>ADJUSTABLE STANDARD PRESSURE RANGES</b>	0-10, 0-25, 0-50, 0-100, 0-250 & 0-500 psig
<b>OPERATING TEMPERATURE</b>	-40° F to +500° F (-40° C to +260° C)
<b>C<sub>v</sub> COEFFICIENT</b>	0.2 (standard) 0.005, 0.01, 0.025, 0.03, 0.04, 0.05, 0.06, 0.095, 0.12, 0.24, 0.3 (optional)
<b>INLET &amp; OUTLET CONNECTIONS</b>	1/8" FNPT

### Features & Benefits

- Gas or liquid service
- Bubble tight shutoff
- Compact size
- Tefzel® or Kalrez® in flow stream

### Options

- Panel mount (requires a 1 3/8" mounting hole)
- Extra ports
- Special welded connections
- Pressure gauges

### GO Regulator

405 Centura Court • PO Box 4866 (29305) • Spartanburg, SC 29303  
Phone (864) 574-7966 Fax (864) 574-5608  
www.goreg.com • sales@goreg.com


# Compact Stainless Steel Back Pressure Regulators

## Maximum Temperature and Control Pressures

SEAT MATERIAL	MAXIMUM TEMPERATURE	@	MAXIMUM CONTROL RANGE
Viton®	250° F (121° C)	@	250 psig (1.72 MPa)
Kalrez®	300° F (148° C)	@	250 psig (1.72 MPa)
Tefzel®	175° F (80° C)	@	500 psig (3.44 MPa)
Polyimide	500° F (260° C)	@	500 psig (3.44 MPa)

## How to Order

For additional configurations, consult the factory. **Standard items in bold.**

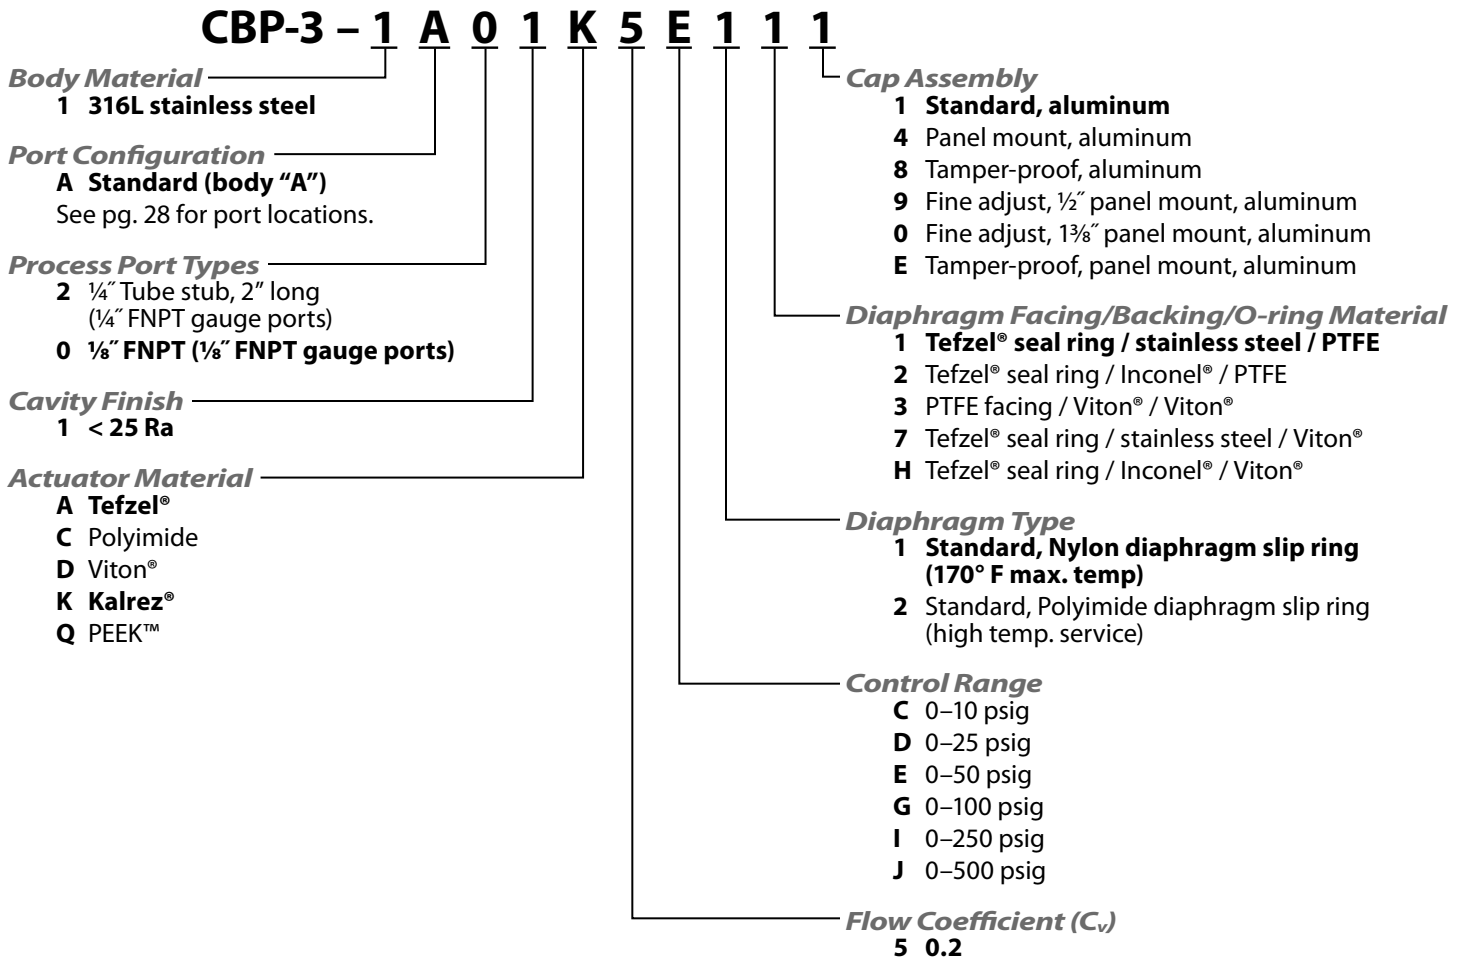


NOTE: The choices above represent an abbreviated list of the more commonly ordered options. For a complete listing of all available options, please see the Selection Wizard on the GO website at [www.goreg.com](http://www.goreg.com) or contact the factory.

For flow curve charts, visit <http://www.goreg.com>.

# Compact Stainless Steel Back Pressure Regulators

## *Outline and Mounting Dimensions*

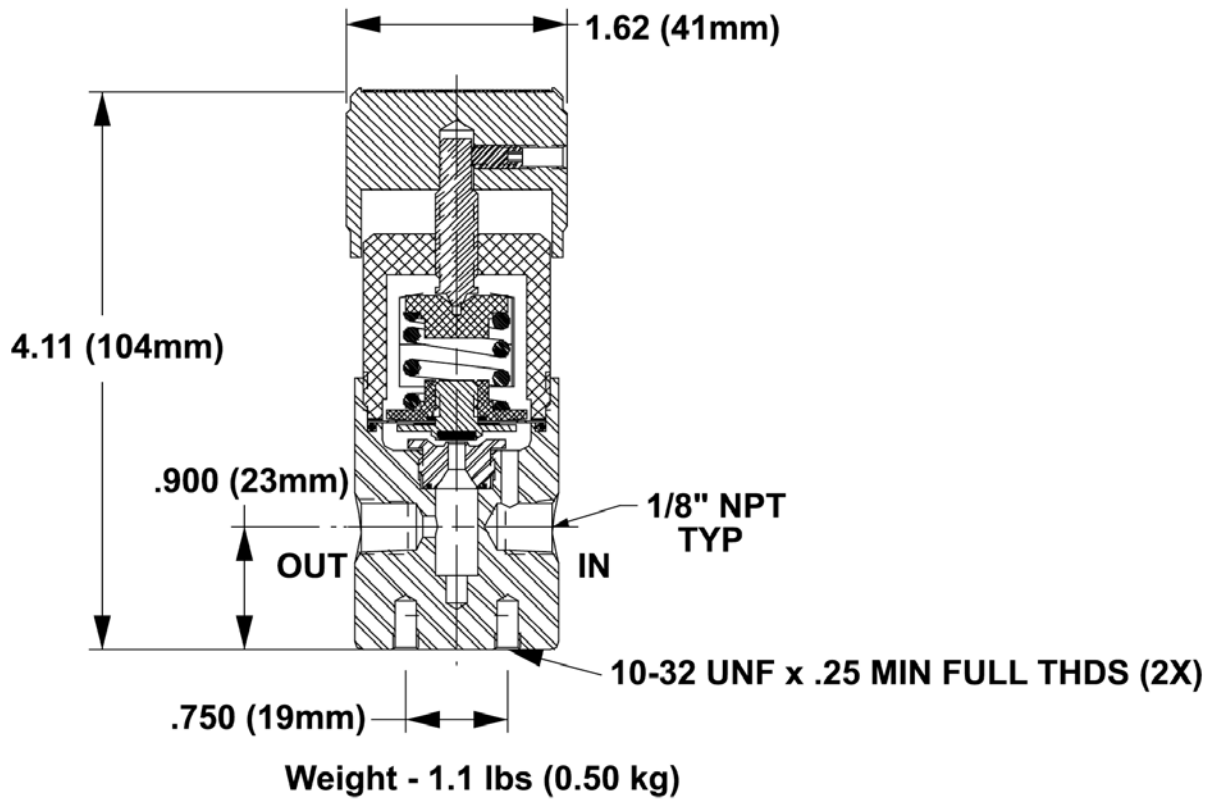



# GO REGULATOR

## LB-1 Series

Ultra-miniature Back Pressure Regulators

### Introduction

The LB-1 is an ultra-miniature back pressure regulator that employs many of the same features found in the time-tested design of the CBP-3 & BP-3 Series back pressure regulators. Designed for surface, panel or manifold mounting, the LB-1 offers the utmost in versatility to the systems designer. It's low internal volume of less than 3cc makes the LB-1 the perfect choice for systems that require rapid purge cycles. Standard features permit using this regulator in a wide variety of services, including corrosive fluids. The LB-1 can be tailored to virtually any application by choosing the optional features. This regulator is designed to allow the construction of compact and sophisticated analytical instrumentation where the optimum in back pressure control is required and space is at a premium.



pressure regulators

### Typical Applications

- Instrumentation systems requiring rapid purge cycles
- Systems with limited space availability
- Analytical instrumentation
- Gas and liquid sampling
- Research labs

### Features & Benefits

- Gas or liquid service
- Electro-polished body with better than 25 Ra finish in diaphragm cavity
- Bubble tight shutoff

### Technical Data

CONSTRUCTION	316L stainless steel, aluminum, brass, or Monel®
ADJUSTABLE STANDARD PRESSURE RANGES	0-10, 0-25, 0-50, 0-100, 0-250 and 0-500 psig
OPERATING TEMPERATURE	-40° F to +500° F (-40° C to +260° C)
C <sub>v</sub> COEFFICIENT	0.2

### GO Regulator

405 Centura Court • PO Box 4866 (29305) • Spartanburg, SC 29303  
Phone (864) 574-7966 Fax (864) 574-5608  
www.goreg.com • sales@goreg.com

# Ultra-miniature Back Pressure Regulators

## Maximum Temperature and Control Pressures

SEAT MATERIAL	MAXIMUM TEMPERATURE	@	MAXIMUM CONTROL RANGE
Viton®	250° F (121° C)	@	250 psig (1.72 MPa)
Kalrez®	300° F (148° C)	@	250 psig (1.72 MPa)
Tefzel®	175° F (80° C)	@	500 psig (3.44 MPa)
Polyimide	500° F (260° C)	@	500 psig (3.44 MPa)
PEEK™	500° F (260° C)	@	500 psig (3.44 MPa)

## How to Order

For additional configurations, consult the factory. **Standard items in bold.**

**LB1 - 1 A 0 1 D 5 E 1 1 1**

**Body Material**

- 1** 316L stainless steel
- 2 Brass
- 3 Aluminum
- 4 Monel®

**Port Configuration**

**A** Standard (body "A")  
See pg. 29 for port locations.

**Process Port Types**

- 0** 1/8" FNPT (all ports)
- 1** Surface mount
- A** 1/16" FNPT (all ports)
- B** 1/8" FNPT inlets; 1/16" FNPT outlets

**Cavity Finish**

- 1** < 25 Ra

**Actuator Material**

- A** Tefzel®
- C Polyimide
- D** Viton® (0–250 psig max.)
- K Kalrez® (0–250 psig max.)
- Q PEEK™

**Cap Assembly**

- 1** Hand knob (0–100 psig max.)
- 2 T-handle
- 3 T-handle, panel mount
- 4 Handle knob, panel mount (1–100 psig max.)
- 8 Tamper-proof

**Diaphragm Facing/Backing/O-ring Material**

- 1** Tefzel® seal ring / stainless steel / PTFE
- 2 Tefzel® seal ring / Inconel® / PTFE
- 3 PTFE facing / Viton® / Viton®
- 7 Tefzel® seal ring / stainless steel / Viton®
- H Tefzel® seal ring / Inconel® / Viton®

**Diaphragm Type**

- 1** Standard, Nylon diaphragm slip ring (170° F max. temp)
- 2 Standard, Polyimide diaphragm slip ring (high temp. service)

**Control Range**

- C 0–10 psig
- D 0–25 psig
- E 0–50 psig
- G 0–100 psig
- I 0–250 psig
- J 0–500 psig

**Flow Coefficient (C<sub>v</sub>)**


- 1** 0.03
- 2 0.05
- 3 0.06
- 4 0.12
- 5** **0.2**
- 6 0.24
- 7 0.3
- A 0.095
- C 0.025
- E 0.04
- I 0.005
- J 53

*NOTE: The choices above represent an abbreviated list of the more commonly ordered options. For a complete listing of all available options, please see the Selection Wizard on the GO website at [www.goreg.com](http://www.goreg.com) or contact the factory.*


# Ultra-miniature Back Pressure Regulators

## Outline and Mounting Dimensions

### Stand Alone Unit

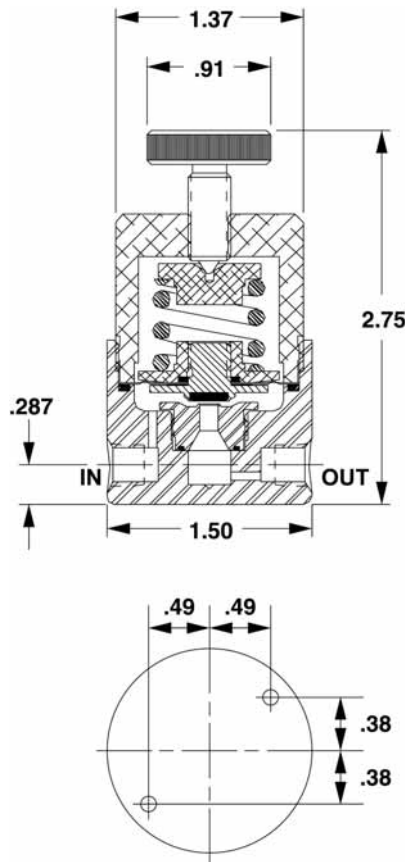

### Surface Mount (Manifold) Unit

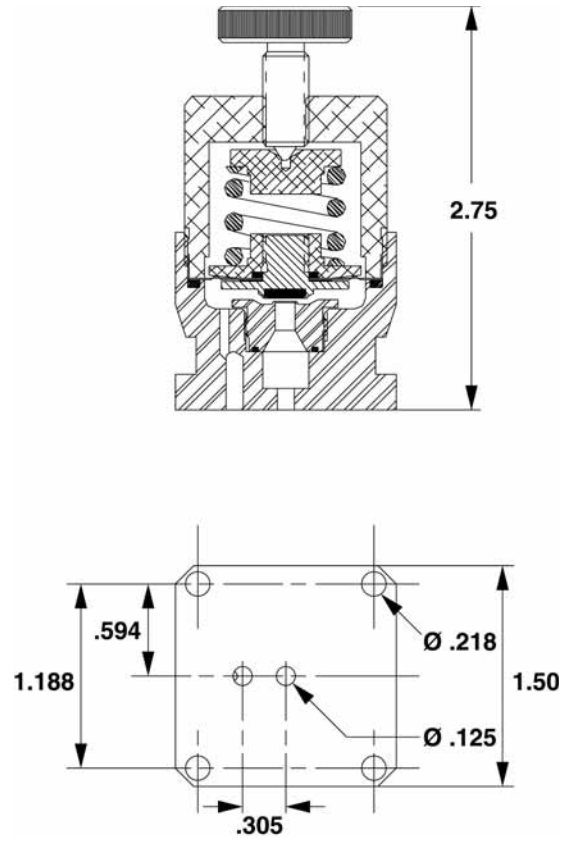

# GO REGULATOR

## SBPR Series

Subatmospheric Back Pressure Regulators

### Introduction

The SBPR Series subatmospheric back pressure regulator is designed to provide precise upstream vacuum control. One example of this could be to introduce a sample gas at a positive pressure into a vacuum chamber. Downstream from this chamber would be the SBPR and a vacuum pump. The positive pressure will build up in the chamber causing the SBPR to open and allow the chamber to return to the vacuum desired. The SBPR will then close and the process will repeat. The large diameter diaphragm aided by a vacuum assist spring, provides the user with optimum sensitivity for subatmospheric pressure control.



pressure regulators

### Typical Applications

- Analytical instrumentation
- Gas and liquid sampling
- Research labs

### Technical Data

CONSTRUCTION	316L stainless steel or brass (standard) Monel® and Hastelloy® C-276 (optional)
ADJUSTABLE PRESSURE CONTROL RANGES	1–30 psia (–27.7 in. H <sub>2</sub> O to 15.3 psig)
OPERATING TEMPERATURE	–40° F to +300° F (–40° C to +148° C)
C <sub>v</sub> COEFFICIENT	0.2
INLET/OUTLET CONNECTIONS	¼" FNPT

### Features & Benefits

- Subatmospheric or positive back pressure control
- Large diaphragm for sensitive pressure control

### Options

- Extra ports
- Panel mount (requires a 1⅜" mounting hole)
- Pressure gauges
- Optional welded connections
- Smaller orifice sizes available: 0.005, 0.03

### GO Regulator

405 Centura Court • PO Box 4866 (29305) • Spartanburg, SC 29303  
Phone (864) 574-7966 Fax (864) 574-5608  
www.goreg.com • sales@goreg.com

# Subatmospheric Back Pressure Regulators


## Maximum Temperature and Control Pressures

SEAT MATERIAL	MAXIMUM TEMPERATURE	@	MAXIMUM CONTROL RANGE
Viton®	250° F (121° C)	@	1–30 psia
Kalrez®	300° F (148° C)	@	1–30 psia
PTFE	200° F (93° C)	@	1–30 psia

Temperatures in excess of 175° F (80° C) require the use of a T-handle or the tamper proof option.

## How to Order


For additional configurations, consult the factory. **Standard items in bold.**

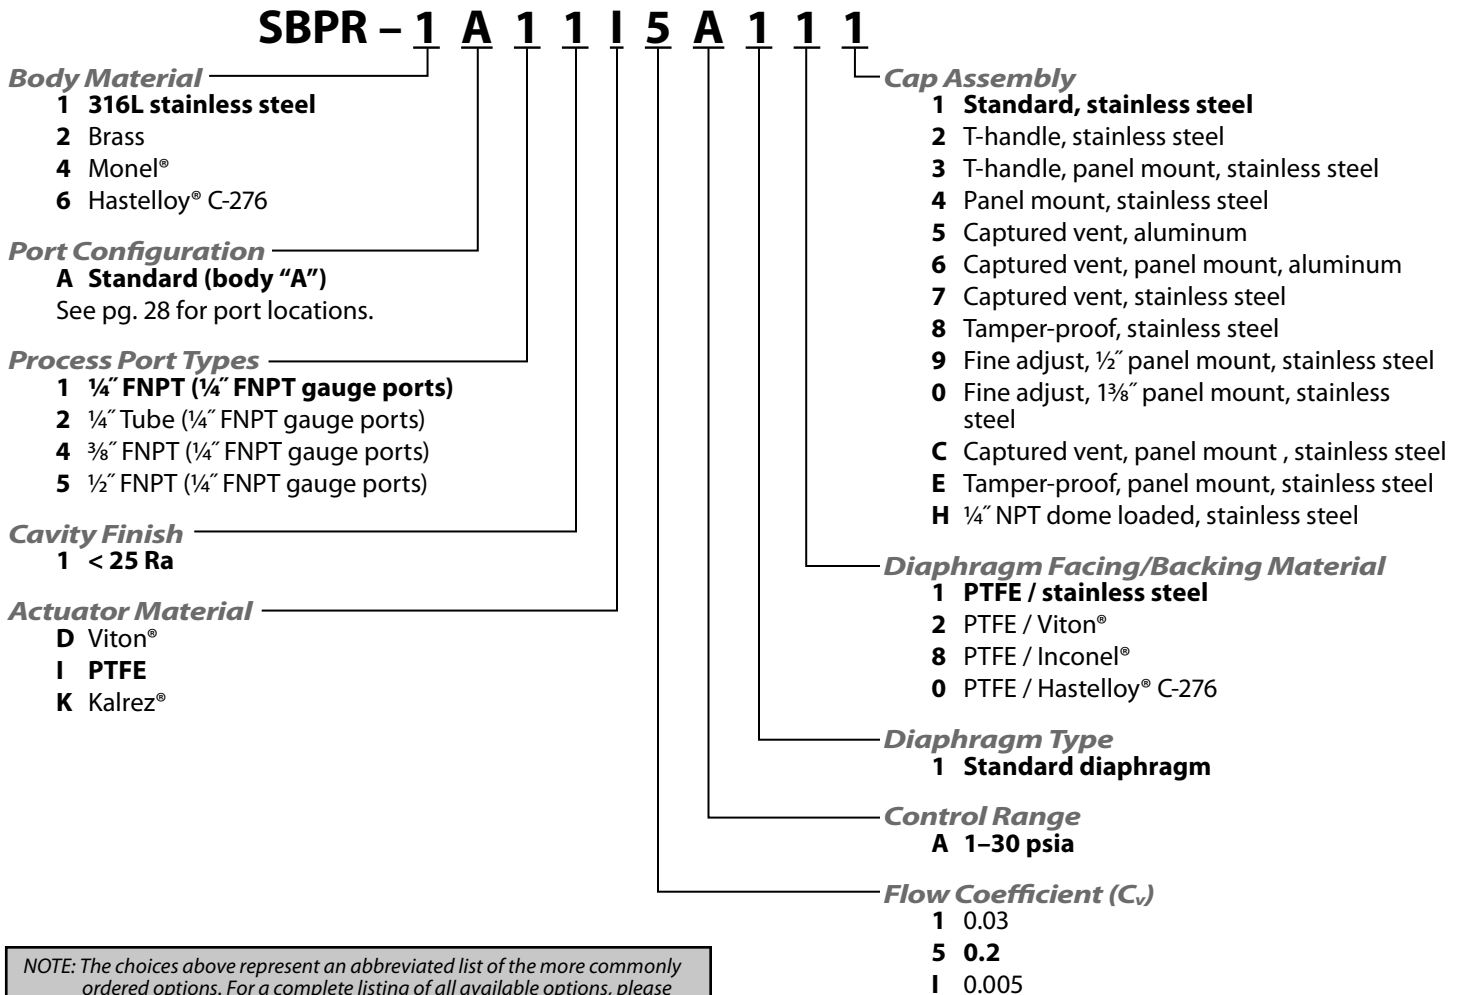

For flow curve charts, visit <http://www.goreg.com>.

# Subatmospheric Back Pressure Regulators

## *Outline and Mounting Dimensions*

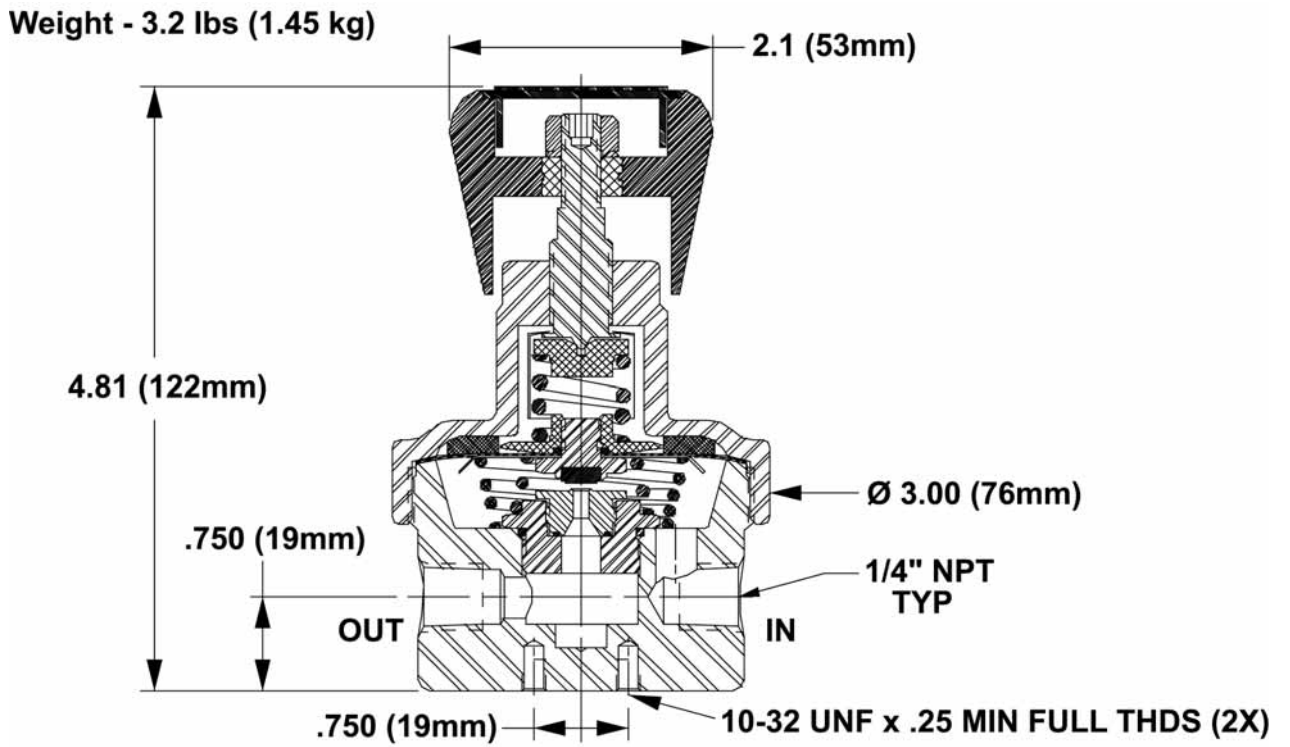

# GO REGULATOR

## BP-60 Series

High Pressure Back Pressure Regulators

### Introduction

The BP-60 Series is the counterpart of the PR-50 pressure reducing series for systems that are higher in pressure and low to moderate flows. This regulator has a diaphragm for maximum sensitivity in providing relief at high pressures. The PTFE stainless seat assembly provides good shutoff in most applications. For economy purposes the cap assembly and knob are of aluminum construction as in the PR-50 companion unit. Good sensitivity and a wide selection of control ranges make this regulator an excellent selection in many research and pilot plant facilities.



pressure regulators

### Typical Applications

- Sampling Systems
- Pilot plants
- Research labs

### Technical Data

CONSTRUCTION	316L stainless steel or brass (alloy 360) Monel® and Hastelloy® C-276 (optional)
ADJUSTABLE PRESSURE CONTROL RANGES	0–500, 0–1000 and 0–2000 psig
OPERATING TEMPERATURE	–40° F to +350° F (–40° C to +175° C)
C <sub>v</sub> COEFFICIENT	0.04
INLET/OUTLET CONNECTIONS	¼" FNPT

### Features & Benefits

- Designed for moderate flow applications
- Diaphragm sensing with nylon, PTFE or stainless steel diaphragm
- Bubble tight shutoff

### Options

- Various C<sub>v</sub>'s available – 0.005, 0.01, 0.025, 0.09
- Panel mounting
- ¾" FNPT, AN 10050-4, SAE J514 or MS 33649 connections

### GO Regulator

405 Centura Court • PO Box 4866 (29305) • Spartanburg, SC 29303  
Phone (864) 574-7966 Fax (864) 574-5608  
www.goreg.com • sales@goreg.com

# High Pressure Back Pressure Regulators

## Maximum Temperature and Control Pressures

### Nylon Diaphragm Backing

SEAT MATERIAL	MAXIMUM TEMPERATURE	@	MAXIMUM CONTROL RANGE
Tefzel®	175° F (80° C)	@	1000 psig (6.89 MPa)
PTFE	175° F (80° C)	@	1000 psig (6.89 MPa)
Polyimide	175° F (80° C)	@	2000 psig (13.76 MPa)
PEEK™	175° F (80° C)	@	2000 psig (13.76 MPa)

### PTFE Diaphragm Backing

SEAT MATERIAL	MAXIMUM TEMPERATURE	@	MAXIMUM CONTROL RANGE
Tefzel®	175° F (80° C)	@	2000 psig (13.76 MPa)
PTFE	175° F (80° C)	@	2000 psig (13.76 MPa)
Polyimide	350° F (176° C)	@	2000 psig (13.76 MPa)
PEEK™	350° F (176° C)	@	2000 psig (13.76 MPa)

## How to Order

For additional configurations, consult the factory. **Standard items in bold.**

**BP60 – 1 A 1 1 C E J 1 2 1**

### Body Material

- 1** 316L stainless steel
- 2** Brass
- 4** Monel®
- 6** Hastelloy® C-276

### Port Configuration

- A** Standard (body "A")
- See pg. 28 for port locations.

### Process Port Types

- 1** ¼" FNPT (¼" FNPT gauge ports)
- 2** ¼" Tube stub, 2" long (¼" FNPT gauge ports)
- 4** ⅜" FNPT (¼" FNPT gauge ports)
- 6** ½" Tube stub, 2" long (¼" FNPT gauge ports)
- 7** AN 10050-4 (¼" FNPT gauge ports)
- 8** SAE J514 (¼" FNPT gauge ports)
- 9** M/S 33649 (¼" FNPT gauge ports)

### Cavity Finish

- 1** < 25 Ra
- 5** < 25 Ra with 10-32 mounting holes

### Actuator Material

- A** Tefzel®
- B** CF PTFE
- C** Polyimide
- I** PTFE
- Q** PEEK™

### Cap Assembly

- 1** Standard, aluminum
- 4** Panel mount, aluminum
- 5** Captured vent, aluminum

### Diaphragm Facing/Backing Material

	FACING	BACKING	O-RING	ACTUATOR
<b>1</b>	SS	Nylon	Viton®	SS
<b>2</b>	none	Nylon	PTFE	SS
<b>7</b>	Inconel®	Nylon	Viton®	Monel®
<b>8</b>	Inconel®	Nylon	PTFE	Monel®
<b>0</b>	Hastelloy® C-276	Nylon	PTFE	Hastelloy® C-276
<b>A</b>	Hastelloy® C-276	Nylon	Viton®	Hastelloy® C-276
<b>Q</b>	SS	PTFE	PTFE	SS
<b>S</b>	SS	PTFE	PTFE/ Kalrez®	SS (max. 450° F)
<b>T</b>	SS	PTFE	Kalrez®	SS (max. 450° F)
<b>V</b>	Inconel®	PTFE	PTFE	Monel®
<b>W</b>	Hastelloy® C-276	PTFE	PTFE	Hastelloy® C-276

### Diaphragm Type

- 1** Standard diaphragm

### Control Range

- J** 1–500 psig
- K** 1–1000 psig
- L** 1–2000 psig

### Flow Coefficient (C<sub>v</sub>)

- C** 0.025
- E** **0.04**
- G** 0.09
- I** 0.005
- J** 0.01


NOTE: The choices above represent an abbreviated list of the more commonly ordered options. For a complete listing of all available options, please see the Selection Wizard on the GO website at [www.goreg.com](http://www.goreg.com) or contact the factory.

For flow curve charts, visit <http://www.goreg.com>.



# High Pressure Back Pressure Regulators

## *Outline and Mounting Dimensions*

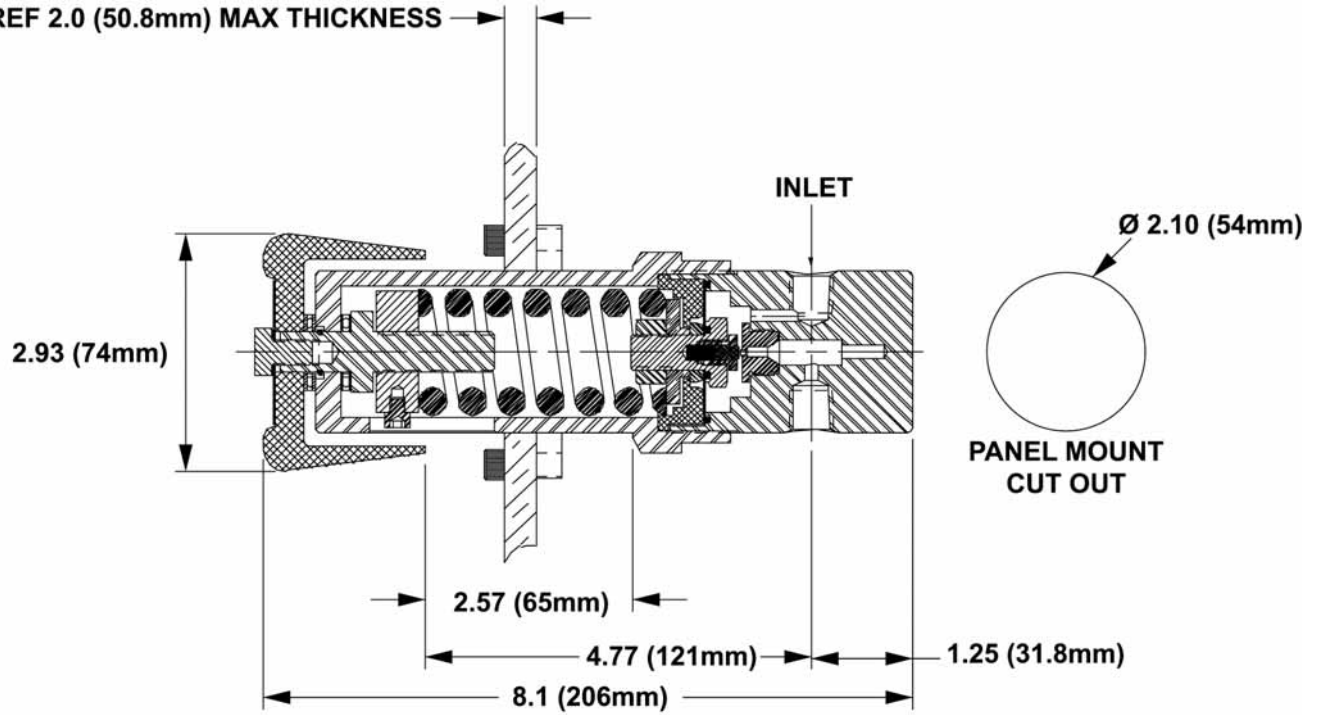

# GO REGULATOR

## BP-66 Series

High Pressure Back Pressure Regulators (10,000 psig)

### Introduction

The BP-66 Series is the counterpart of the PR-57 pressure reducing series for systems that are higher in pressure and low to moderate flows. This regulator has piston sensing to provide relief at high pressures. The Polyimide/stainless seat assembly provides good shutoff in most applications. For economy purposes the cap assembly and knob are of aluminum construction as in the PR-57 companion unit. Good sensitivity and a selection of control ranges make this regulator an excellent selection in many research and pilot plant facilities.



pressure regulators

### Typical Applications

- Pilot plants
- Research labs

### Technical Data

<b>CONSTRUCTION</b>	316L stainless steel (standard) Monel® and titanium (optional)
<b>ADJUSTABLE PRESSURE CONTROL RANGES</b>	0–2000, 0–4000, 0–6000, 0–7500 and 0–10,000 psig
<b>OPERATING TEMPERATURE</b>	–40° F to +350° F (–40° C to +177° C)
<b>C<sub>v</sub> COEFFICIENT</b>	0.04 (standard) 0.01 and 0.12 (optional)
<b>INLET/OUTLET CONNECTIONS</b>	¼" FNPT (standard) AN 10050-4, SAE J514, MS 33649, or ⅜" FNPT (optional)

### Features & Benefits

- Spring-loaded piston sensor
- Gas and liquid service
- Viton® seals (other elastomers optional)

### Options:

- Panel mounting
- Monel® and titanium body construction
- C<sub>v</sub> of 0.01 or 0.12
- AN 10050-4, SAE J514, MS 33649 or ⅜" FNPT connections

### GO Regulator

405 Centura Court • PO Box 4866 (29305) • Spartanburg, SC 29303  
Phone (864) 574-7966 Fax (864) 574-5608  
www.goreg.com • sales@goreg.com


# High Pressure Back Pressure Regulators (10,000 psig)

## Maximum Temperature and Control Pressures

SEAT MATERIAL	MAXIMUM TEMPERATURE	@	MAXIMUM CONTROL RANGE
Polyimide	350° F (177° C)	@	10,000 psig (68.8 MPa)
PEEK™	350° F (177° C)	@	10,000 psig (68.8 MPa)

## How to Order

For additional configurations, consult the factory. **Standard items in bold.**

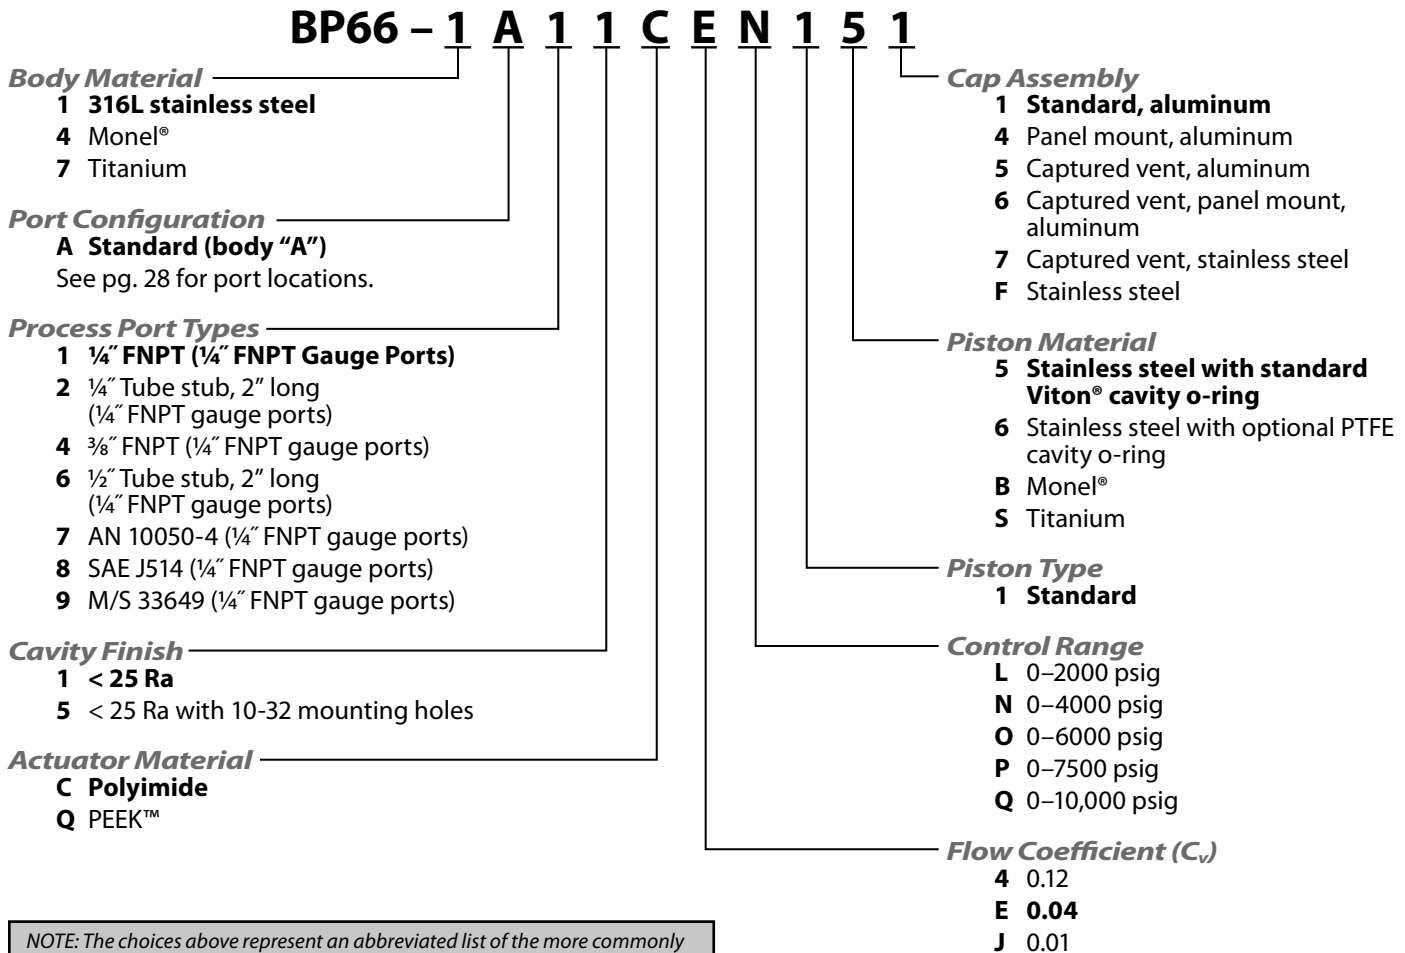


NOTE: The choices above represent an abbreviated list of the more commonly ordered options. For a complete listing of all available options, please see the Selection Wizard on the GO website at [www.goreg.com](http://www.goreg.com) or contact the factory.


# High Pressure Back Pressure Regulators (10,000 psig)

## *Outline and Mounting Dimensions*

PANEL REF 2.0 (50.8mm) MAX THICKNESS

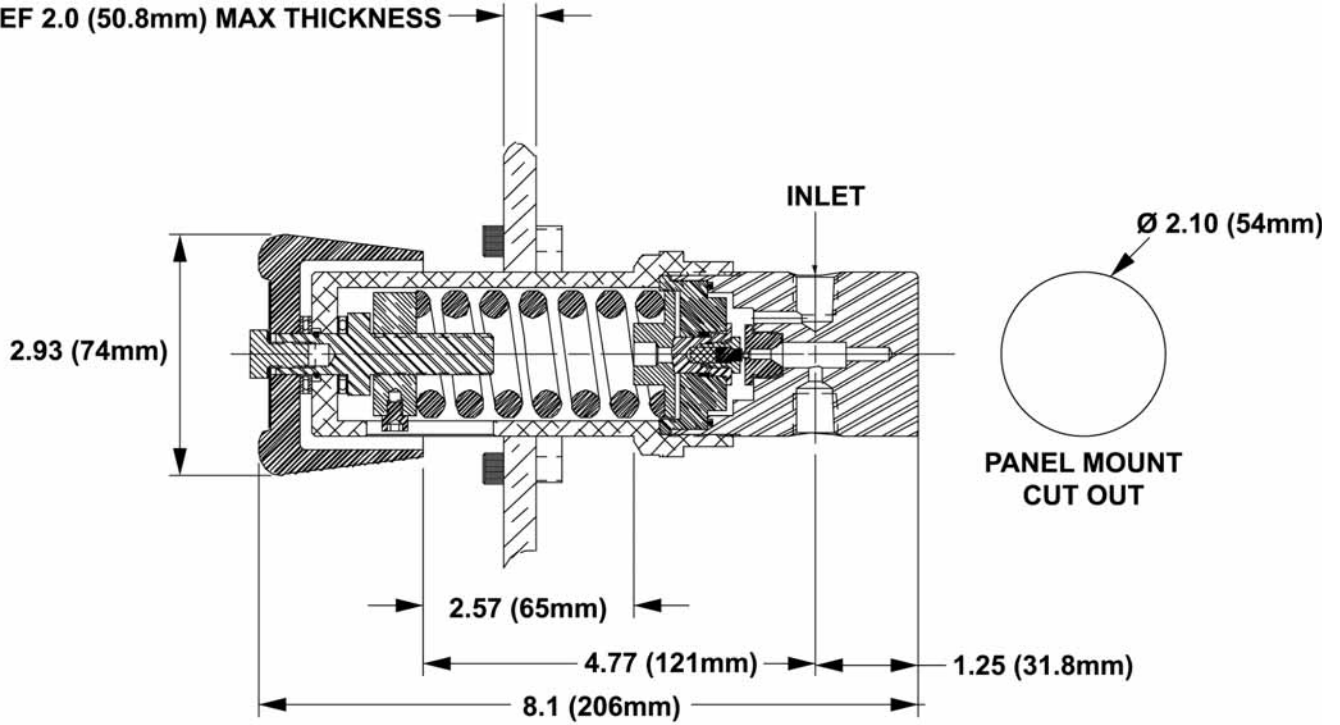

# Port Locations (Back Pressure Regulators)

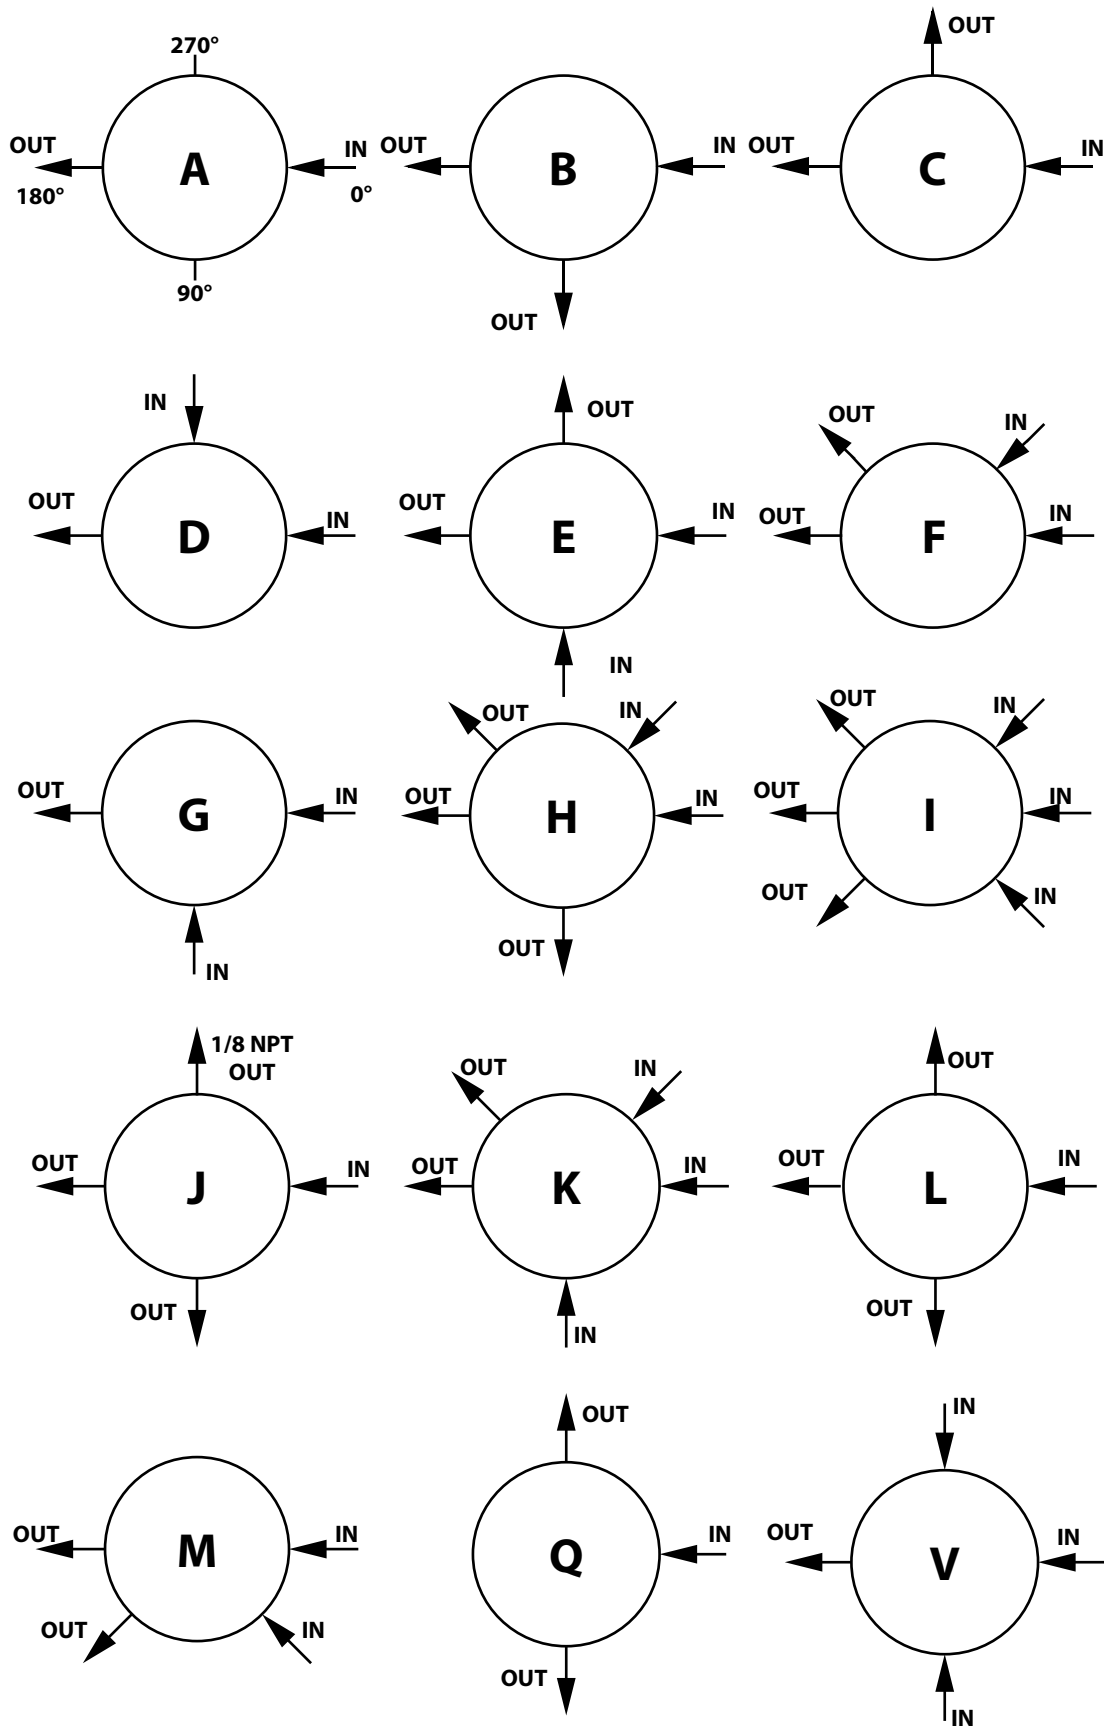


LOCATION OF PORTS FROM TOP VIEW

# Porting Options for LB-1 Back Pressure Valve

Arrow pointing toward body is inlet, arrow pointing away from body is outlet.

Location of ports from top view

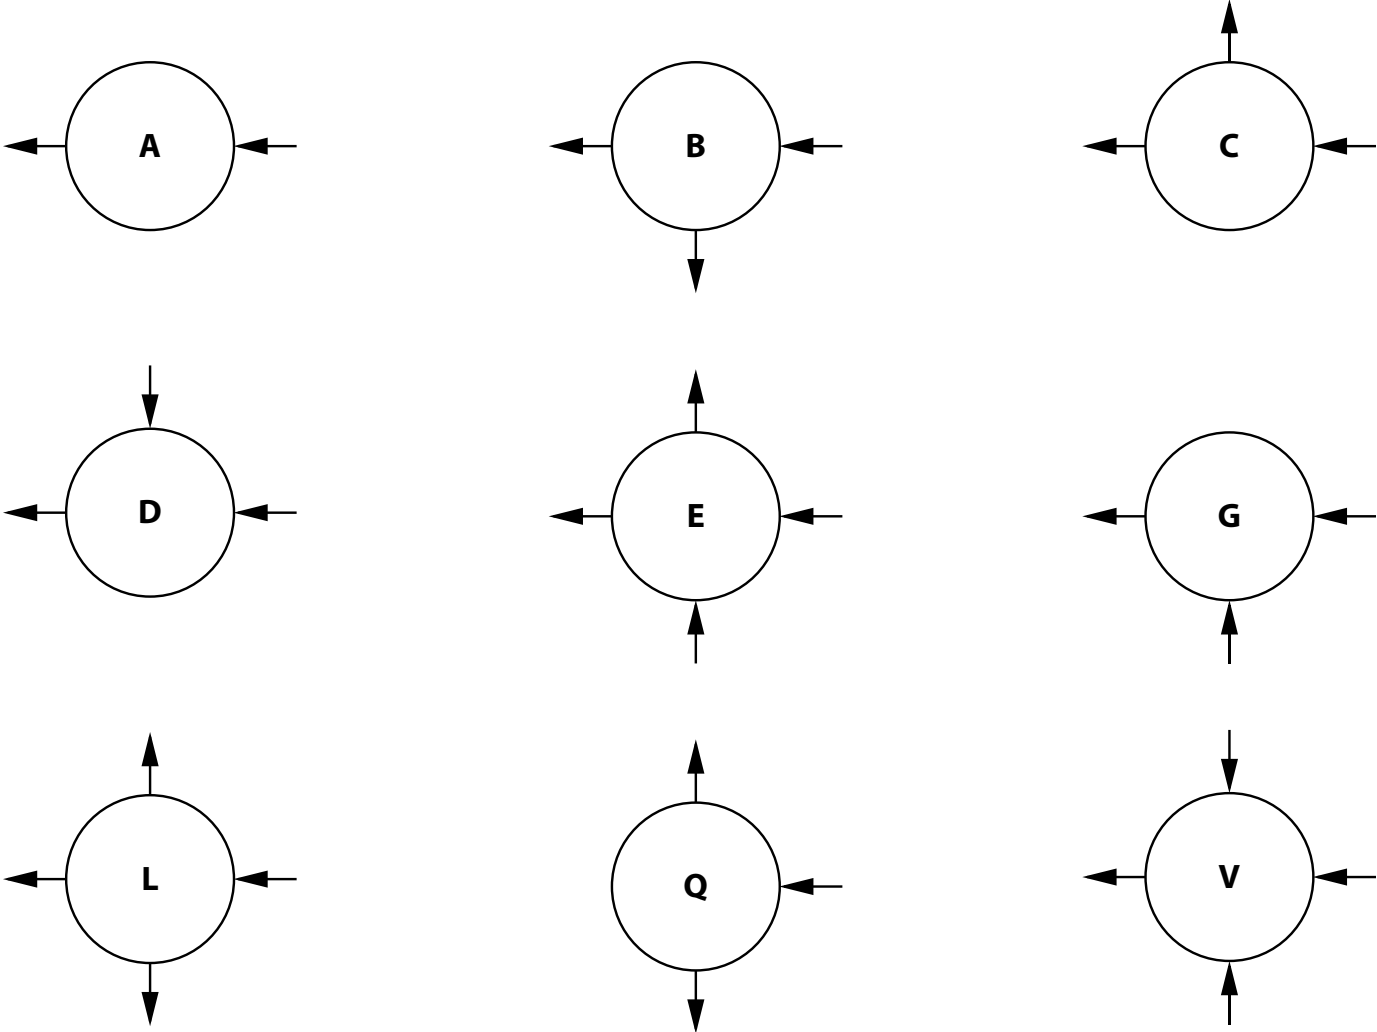

**SURFACE MOUNT STYLES**  
requires "Surface Mount" port type connections

**#1**

Center port is outlet, all other ports are inlets.  
Location of ports from bottom view

## ***For Your Safety***

---

It is solely the responsibility of the system designer and user to select products suitable for their specific application requirements and to ensure proper installation, operation, and maintenance of these products. Material compatibility, product ratings and application details should be considered in the selection. Improper selection or use of products described herein can cause personal injury or property damage.

*Kalrez® and Viton® are registered trademarks of DuPont DOW Elastomers.  
Hastelloy C® is a registered trademark of Haynes International.  
Monel® and Inconel® are registered trademarks of Special Metals Corporation.  
PEEK™ is a trademark of Victrex PLC.*







# CIRCOR

INSTRUMENTATION TECHNOLOGIES



**CIRCOR Instrumentation Technologies (CIT) is the logical choice for fluid control solutions. We provide the lowest cost of ownership, offering the best in class reliability and availability of our products. We have global coverage, delivering value in the form of local, flexible service to meet our customer's needs. CIT is a product group specializing in instrumentation with orifice sizes typically up to 2".**

**Our corporate head office and ISO 9001:2000 registered  
manufacturing facilities are located at  
405 Centura Court  
Spartanburg, SC, USA, 29303  
Tel +1-864-574-7966  
Fax +1-864-587-5608  
[www.hoke.com](http://www.hoke.com)  
[www.circortechnologies.com](http://www.circortechnologies.com)**

**Proudly Distributed By:**

