



SAMAN FATER RASHA

www.famin.ir



Read Instructions Before Installing

- DO install the WATCHDOG in a port where the centerline of the main body is at the optimum fluid level
- DO NOT use chlorinated solvents with the plastic body WATCHDOG
- DO NOT use the reservoir as a lever. It may damage the WATCHDOG
- DO NOT use the WATCHDOG for stepping, standing, or heavy loading
Although made from high strength materials, it is misuse of the WATCHDOG

To Install:

- 1 Prior to installing the Watchdog Oiler, shaft rotation direction must be determined, typically indicated by an arrow on the casting of the equipment. Install oiler on the side of the equipment facing the direction of shaft rotation to prevent misfeeding of the Watchdog Oiler (see Fig 1).
- 2 Unscrew the reservoir from the main body and set aside.
- 3 Make sure all contaminants or noticeable particles are removed from the unit and bearing housing.
- 4 Apply pipe thread sealant to the NPT thread (see reverse side on "Pipe Thread Sealants"). Note: Some units may be equipped with an adapter. Apply thread sealant to the main body and adapter. Then thread adapter to the main body
- 5 Hand tighten Watchdog in a port where the centerline of the main body is at the optimum fluid level (Fig. 1).
- 6 Tighten Watchdog using an open end wrench until internal threaded boss is vertical (Fig. 2). When tightening plastic main body, tighten one turn from bottoming the hex against housing wall.
- 7 Verify that the centerline of the main body is parallel with the oil level being maintained.
- 8 Fill the bearing chamber through the main body until it reaches just below the optimum fluid level visible in the sight. Use the reservoir to feed oil to the proper level.
- 9 Using a funnel, fill the reservoir (Fig. 3).
- 10 Verify o-ring is on spout.
- 11 Place thumb over reservoir spout, invert, and insert the spout into the internal threaded boss on the main body. Tighten reservoir. DO NOT OVER TIGHTEN.
- 12 Start up machine and verify proper oil level is being maintained.

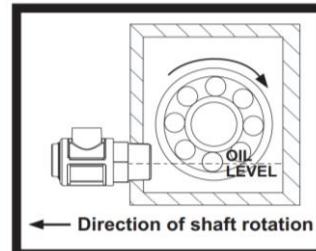


Fig. 1

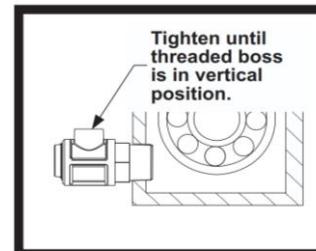


Fig. 2

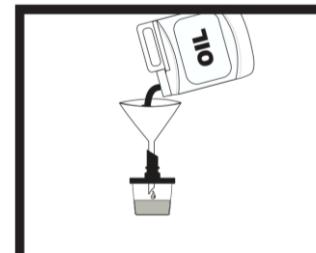


Fig. 3

SAMAN FATER RASHA



www.famin.ir